

Mercedes Benz WR129 Convertible AC Vent Levers

Purchase Includes:

- Vent Lever

Tools Needed:

- Hook
- Plastic Wedge
- Philips Screwdriver



TOP CLASSIC CARS LLC & TOP CLASSIC PARTS LLC



This is the installation area - The center Vents need to be removed.

The first step is to lift the bottom cover of the vent with a hook so that it comes off as shown in the picture

©TOP CLASSIC PARTS LLC , Ft. Myers, FL, <https://benz.parts>

TOP CLASSIC CARS LLC & TOP CLASSIC PARTS LLC



Remove the cover with a plastic wedge as shown in the picture

©TOP CLASSIC PARTS LLC , Ft. Myers, FL, <https://benz.parts>

TOP CLASSIC CARS LLC & TOP CLASSIC PARTS LLC



Remove the
two screws

Open the
compartment
cover

©TOP CLASSIC PARTS LLC , Ft. Myers, FL, <https://benz.parts>

TOP CLASSIC CARS LLC & TOP CLASSIC PARTS LLC



IF THERE IS A TELEPHONE:

Use the hook to pull the phone from the compartment

Remove the cables from
the phone and put it aside



TOP CLASSIC CARS LLC & TOP CLASSIC PARTS LLC



One the telephone is pulled from the compartment box, there is a metal case that was holding the phone. Remove the 4 screws as shown in the picture and pull the case from the box.

TOP CLASSIC CARS LLC & TOP CLASSIC PARTS LLC




Once the metal case is removed, there are two more screws as shown in the picture. Please remove in order to pull the compartment box from its position.

©TOP CLASSIC PARTS LLC , Ft. Myers, FL, <https://benz.parts>

TOP CLASSIC CARS LLC & TOP CLASSIC PARTS LLC



TOP CLASSIC CARS LLC & TOP CLASSIC PARTS LLC

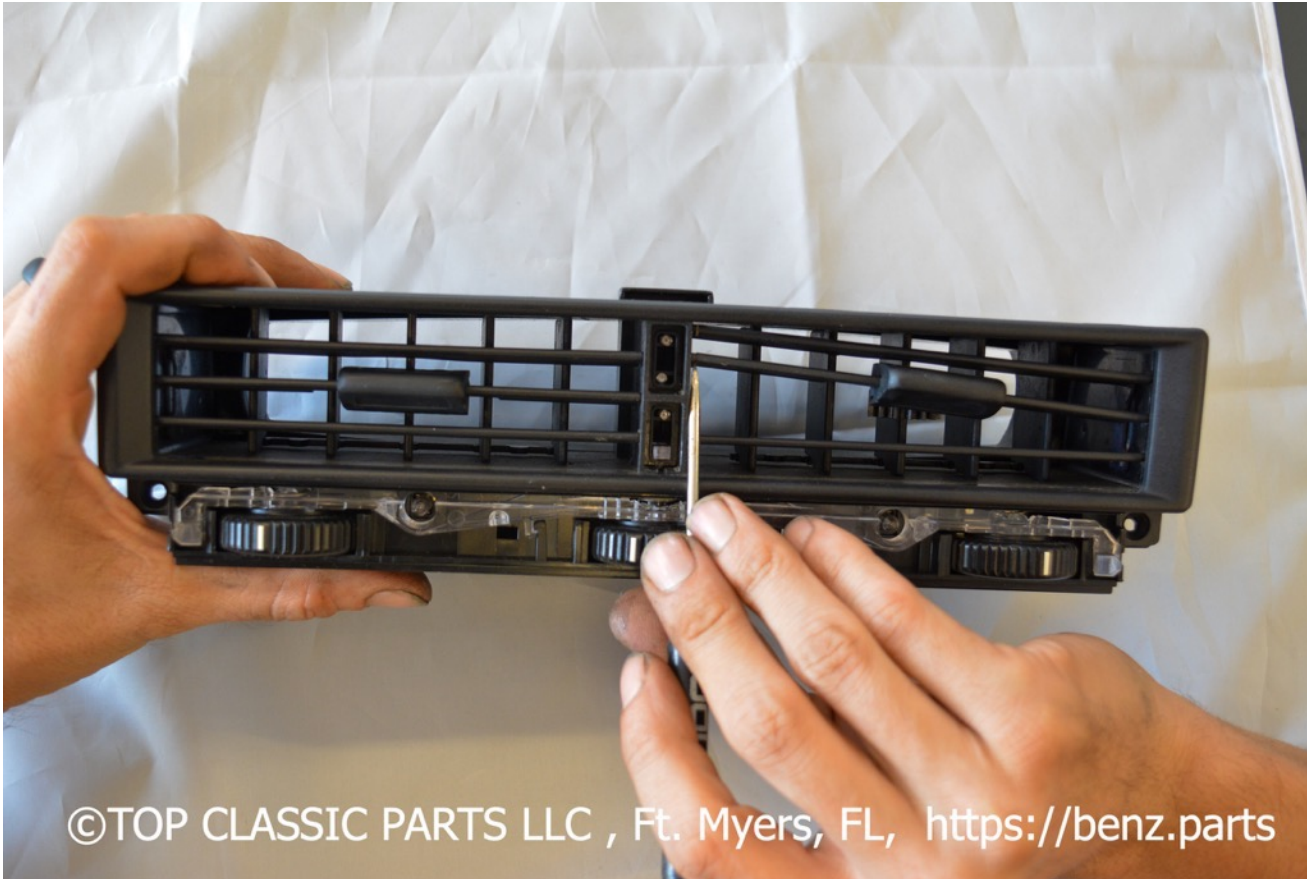


Use a small flat screwdriver to pull the middle piece out of its position. There is a little pin that is sitting in the hole, just lever with the screwdriver.

Details on the next slide.

©TOP CLASSIC PARTS LLC , Ft. Myers, FL, <https://benz.parts>

TOP CLASSIC CARS LLC & TOP CLASSIC PARTS LLC

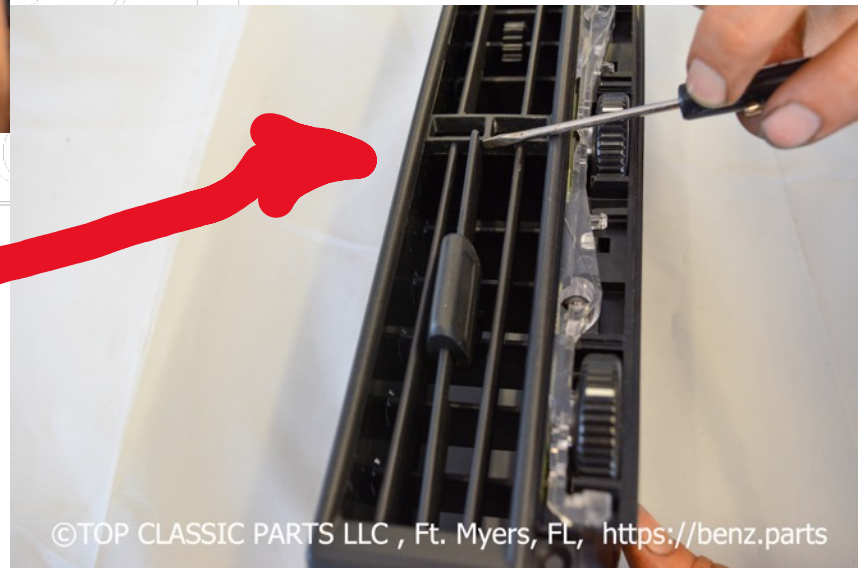




Remove the middle fin from the AC unit and separate the vent lever as shown in the picture.

©TOP CLASSIC PARTS LLC , Ft. Myers, FL, <https://benz.parts>

TOP CLASSIC CARS LLC & TOP CLASSIC PARTS LLC

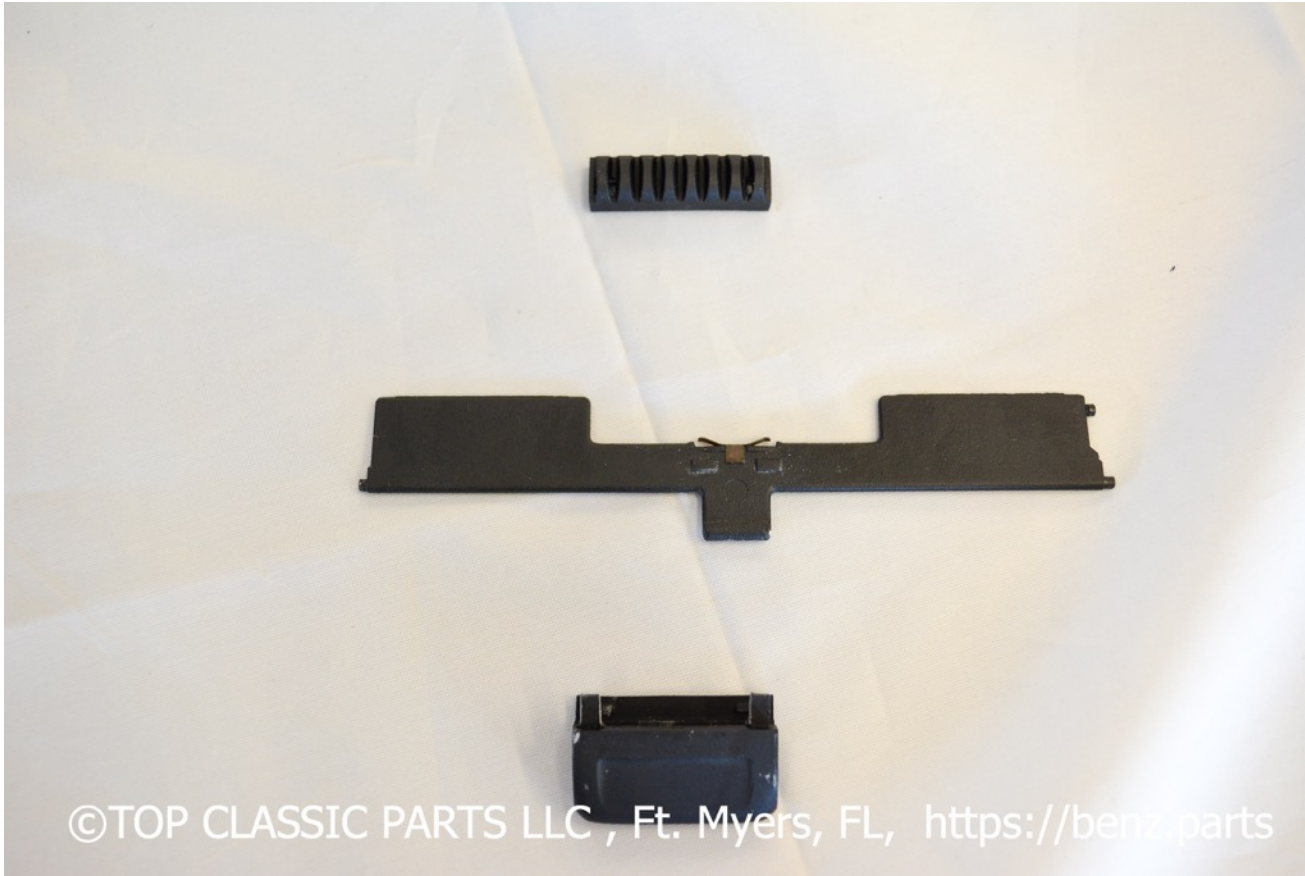

Remove the piece from the AC unit and separate the vent lever as shown in the picture and put them together


TOP CLASSIC CARS LLC & TOP CLASSIC PARTS LLC



The new parts needs to be installed as shown in the picture, the clips are on the bottom and the larger part at the top



TOP CLASSIC CARS LLC & TOP CLASSIC PARTS LLC

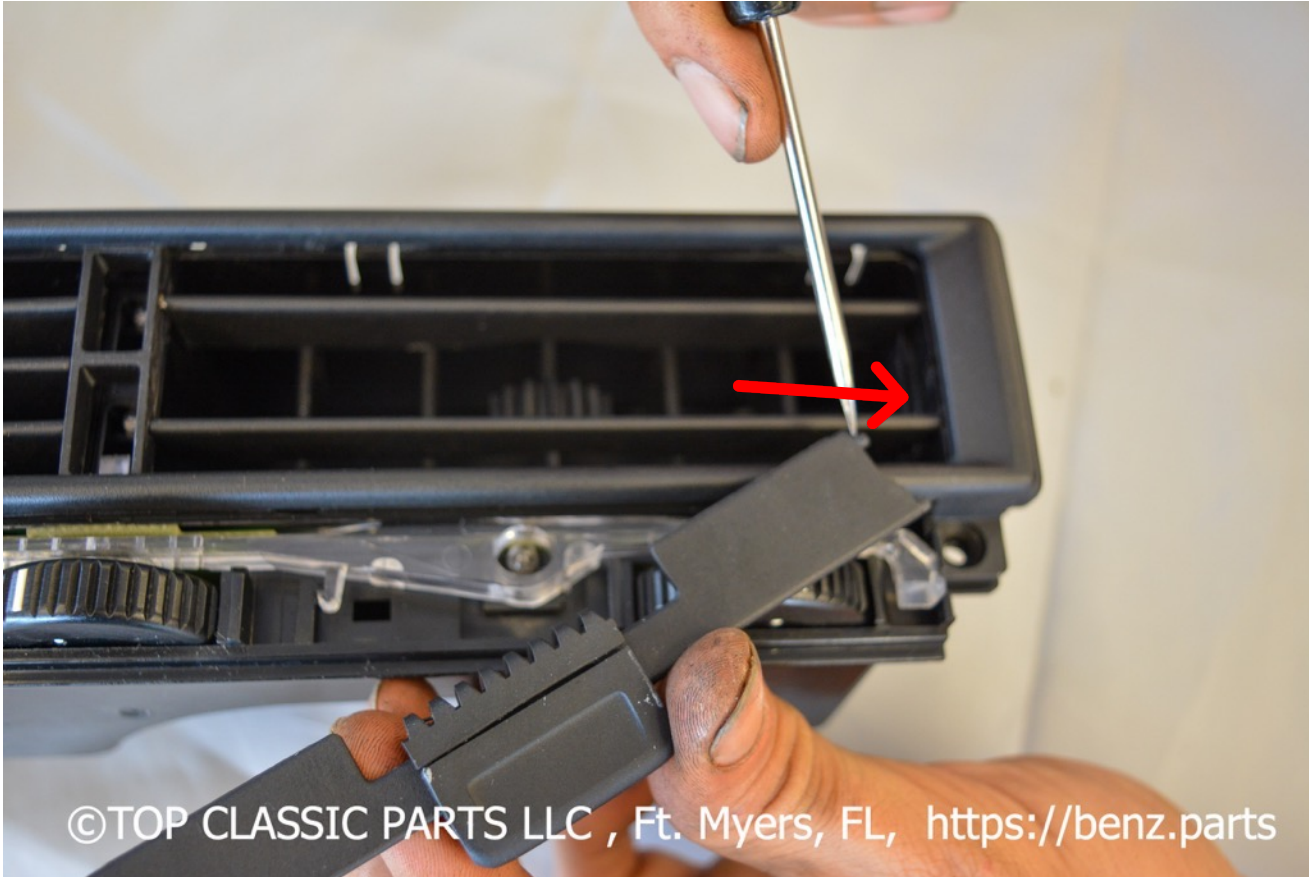

The pin
must fit in
the hole
marked in
the picture

©TOP CLASSIC PARTS LLC , Ft. Myers, FL, <https://benz.parts>

TOP CLASSIC CARS LLC & TOP CLASSIC PARTS LLC



Make sure that the fins are straight, so the lever fits just right and is in position that allows to move all the way left and right.

©TOP CLASSIC PARTS LLC , Ft. Myers, FL, <https://benz.parts>

The perfect Result



©TOP CLASSIC PARTS LLC , Ft. Myers, FL, <https://benz.parts>

TOP CLASSIC CARS LLC &
TOP CLASSIC PARTS LLC



To get more information about this part, please
visit [129ACV](http://www.benz.parts) at www.benz.parts

To get more information on our Dealership and
latest inventory, please visit www.sl2sell.com

Your ***Top Classic Parts Team***
Fort Myers, FL

Top Classic Parts LLC, 1952 Commercial Dr Fort Myers, FL, 33901
Cell: 404 889 2285 | Email: vladimir@top-classic-cars.com