

How to replace Mercedes-Benz R129 and W124 Convertible Interior Vanity Mirror on the Sunvisors Part#12981023179 V3.0

Klaus Hackbarth 1952 Commercial Dr Fort Myers, FL, 33901 Cell: 239 771 0057 Email: klaus@top-classic-parts.com







We have now for you 2 different styles of our products. Since V3.0 our mid piece and the lid piece fit in our own developed LED Bottom piece, but also in the genuine bottom piece. If you only need our "plug & play" 2 Piece, please go to page 11







The first step is to take the Sunvisors off the Rod. You don't have to unscrew it like the part we show you here. The Sunvisor is only pushed on the rod. You can pull it off the rod! It feels hard to do, but don't worry, we did it 100 times... ©TOP CLASSIC CARS LLC, Ft. Myers, FL, https://129.parts



Take off the old broken mirror. Don't worry to break it. The Mirror Bottom Part is fixed with 6 screws with the Sunvisor. Keep the screws save, you need them again to fix our new designed mirror at the same spots.






This is our new designed state of the art LED light system with switch, for our new Vanity Mirrors. You get them preinstalled included in your purchase...







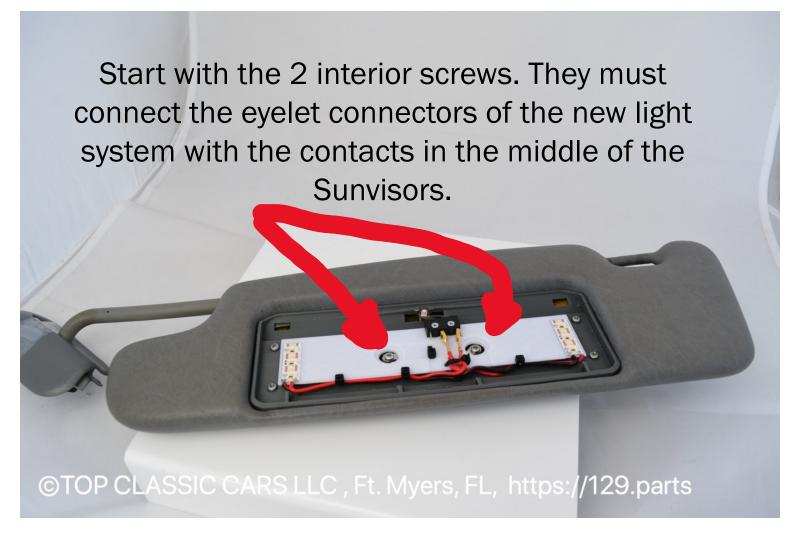



Installation Hint

Mercedes wired the Sunvisors electric different at the left and right side. We had to produce left and right sided Vanity Mirrors, because our LED's need positive and negative poles connected at specific sides. We mentioned now that Mercedes sometimes mis wired it either. So please check after you have screwed in the 2 power eyelets, that the light works. If not, you have only to change the left and right eyelet wires. Sorry about it. We made them to fit exact as the Mercedes WIRE Diagram describes...

FORT MYERS, FL

February 27, 2022
























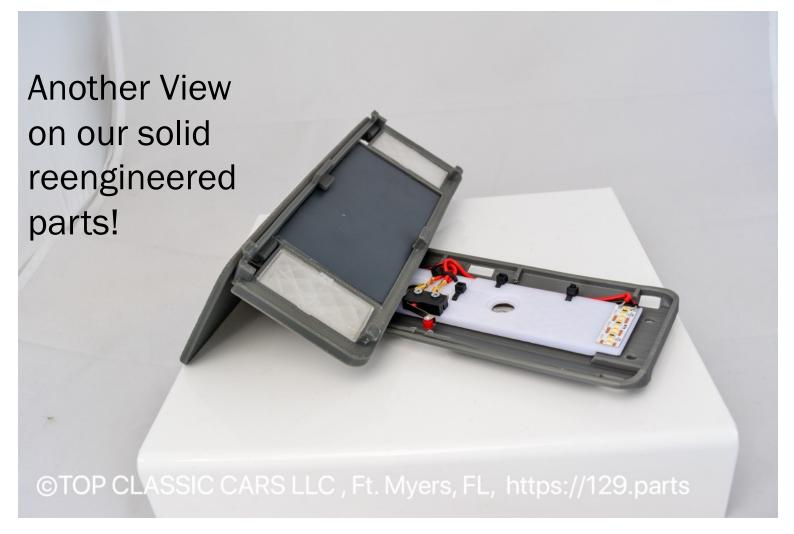







Thx for watching our Video! Please visit our Store at http://129.parts and our Dealership at http://www.sl2sell.com

Klaus Hackbarth 1952 Commercial Dr Fort Myers, FL, 33901 Cell: 239 771 0057 Email: klaus@top-classic-parts.com