

Mercedes Benz W124 Convertible Sunvisor Corner Trim

Purchase Includes:

- Sunvisor Corner Cover
- Screw

Tools Needed:

- Screwdriver

This Installation Guide applies
to the following Models:

- R129
- A124

Top Classic Parts LLC, 1952 Commercial Dr Fort Myers, FL, 33901
Cell: 239 771 0057 Email: order@top-classic-parts.com


TOP CLASSIC CARS LLC & TOP CLASSIC PARTS LLC



Remove the old or broken Sunvisor Trim to free the installation area as shown in the picture.


©TOP CLASSIC PARTS LLC , Ft. Myers, FL, <https://benz.parts>

TOP CLASSIC CARS LLC & TOP CLASSIC PARTS LLC

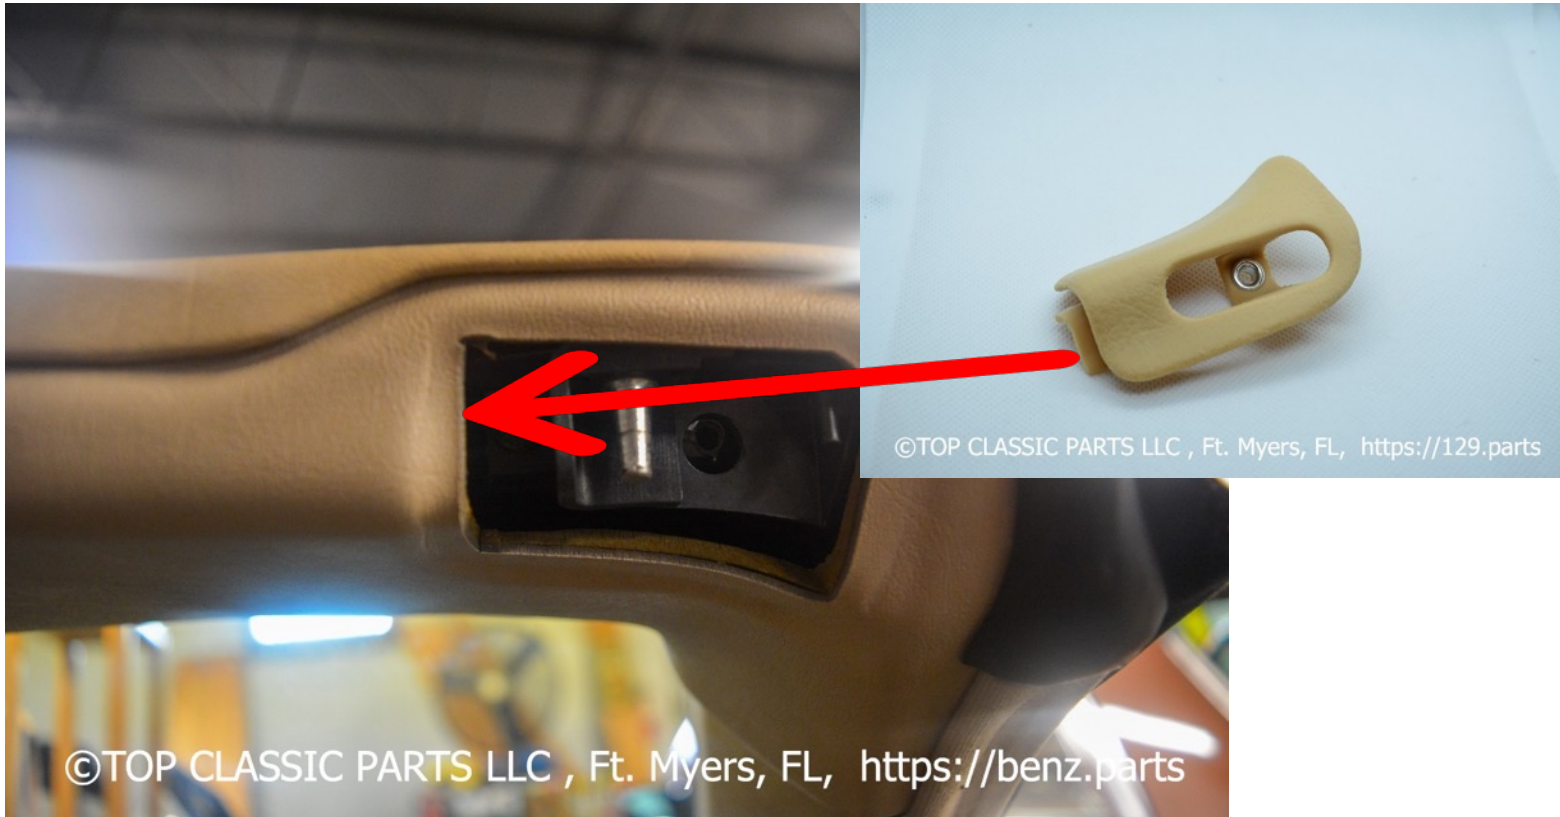

Instert the Trim so the clip slides below the dashboard as show in the pictures above

TOP CLASSIC CARS LLC & TOP CLASSIC PARTS LLC

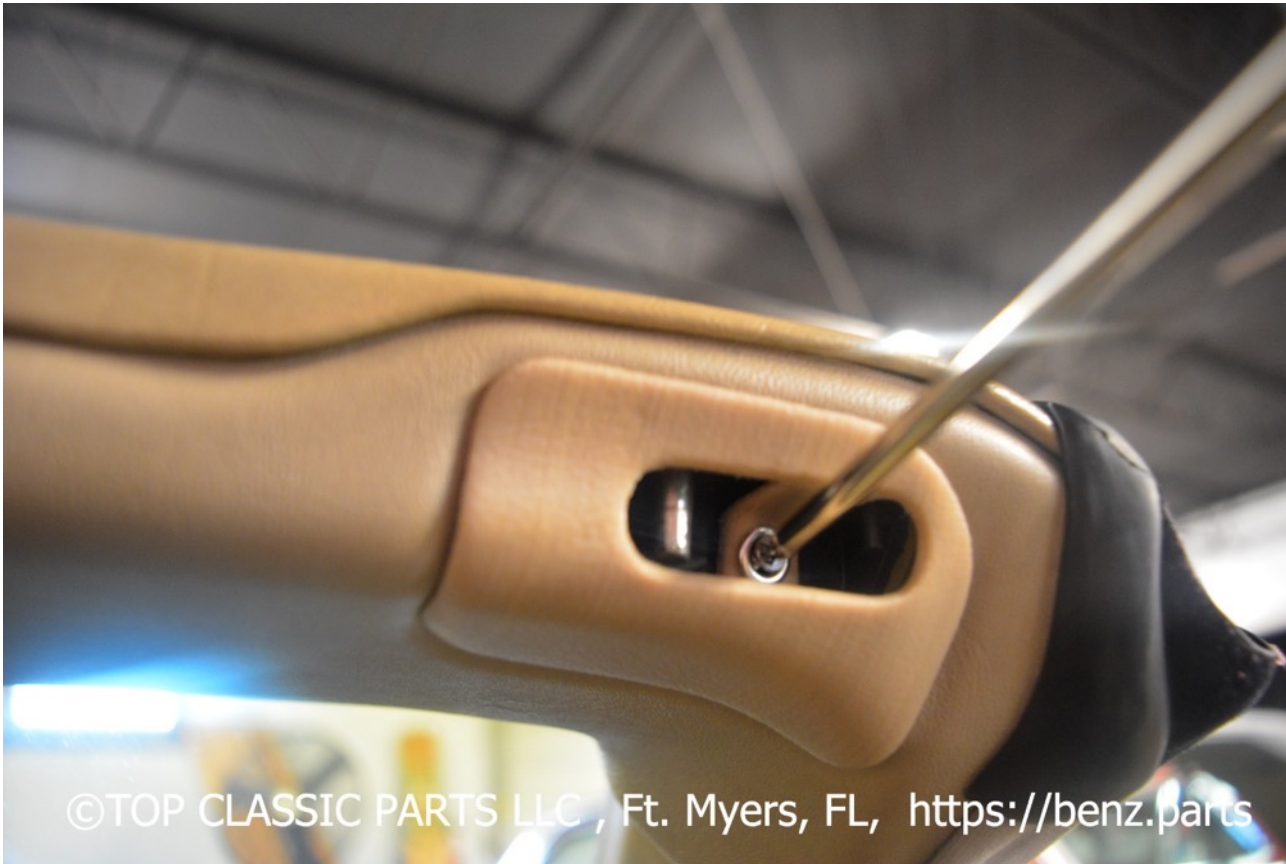

Once the Trim is in Position, use the screw in the package and a screwdriver to fix the Trim in the intended position.

©TOP CLASSIC PARTS LLC , Ft. Myers, FL, <https://benz.parts>

TOP CLASSIC CARS LLC & TOP CLASSIC PARTS LLC



The Result



©TOP CLASSIC PARTS LLC , Ft. Myers, FL, <https://benz.parts>

TOP CLASSIC CARS LLC &
TOP CLASSIC PARTS LLC



Thx for watching our HowTo!
Please visit our Parts Store at

[TOP CLASSIC PARTS LLC](#)

and our Dealership at

[TOP CLASSIC CARS LLC](#)

Top Classic Parts LLC 1952 Commercial Dr Fort Myers, FL, 33901
Cell: 239 771 0057 Email: orders@top-classic-parts.com