

# How to replace Mercedes Benz R129 Convertible AC Vent Levers

### Purchase Includes:

Vent Lever

### Tools Needed:

- Hook
- Plastic Wedge
- Philips Screwdriver



**Top Classic Parts LLC,** 1952 Commercial Dr Fort Myers, FL, 33901 Cell: 239 771 0057 Email: order@top-classic-parts.com



Please note that there are 2 ways of replacing the Vent Levers, the first few slides will show you the more difficult way by removing the whole Vent Cover. Further towards the end of this document (slide 11+) you will find an easier method which you might want to consider if you feel comfortable with your mechanical skills.





Here you can see the right Vent Lever is broken off





This is the installation area – The center Vents need to be removed.

The first step is to lift the bottom coverof the vent with a hook so the it comes off as shown in the picture





Remove the cover with a plastic wedge as shown in the picture





Remove the two screws

Open the compartment cover





Remove the cables from the phone and put it aside

### IF THERE IS A TELEPHONE:

Use the hook to pull the phone from the compartment







One the telephone is pulled from the compartment box, there is a metal case that was holding the phone. Remove the 4 screws as shown in the picture and pull the case from the box.





Once the metal case is removed, there are two more screws as shown in the picture. Please remove in order to pull the compartment box from its position.










This is the quicker version of removing just the middle fin that holds the vent lever. Therefor you'll take a very small flat screwdriver and push it between the fin and the inner or middle side. Don't try it from the outer side!! Then you move the screwdriver to the right and that part should pop right out. For easier understanding check the next slide



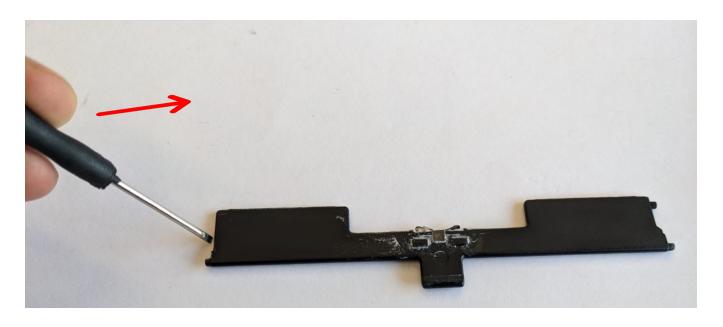


In the picture above you can see where you should place your screwdriver. Between the fin and the plastic. And then move the screwdriver in the direction of the arrow. As soon as the pin in the front of the fin pops out you can remove the whole fin. Pictured in the next slide





Once the inner or middle side popped out, you will be able to easily pull it out of the outer side. Make sure all the fins are vertically and horizontally very straight.




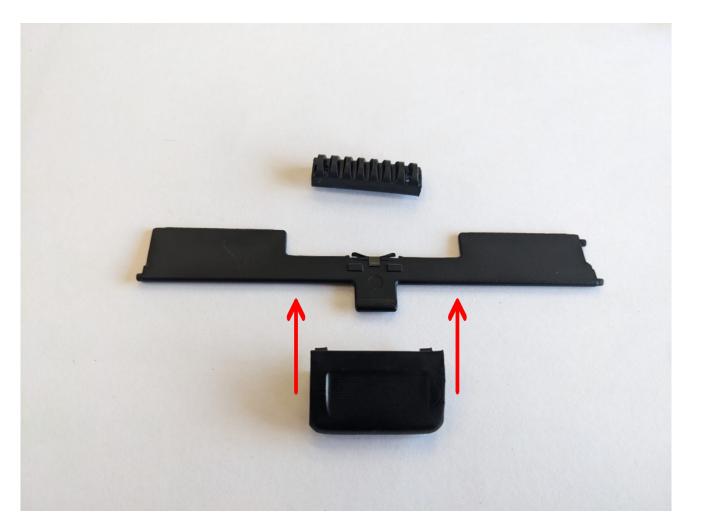


Now you can start by pushing the new purchased lever onto the fin



Should look like this. Then you can attach the back side part to the lever, it should make a clicking sound.

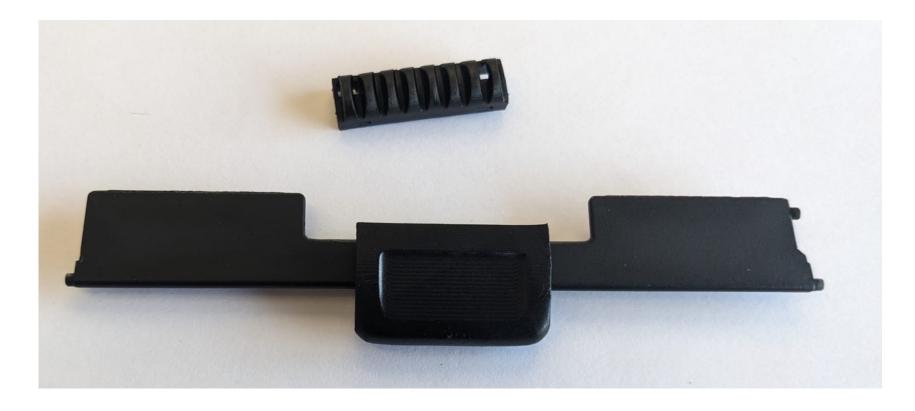



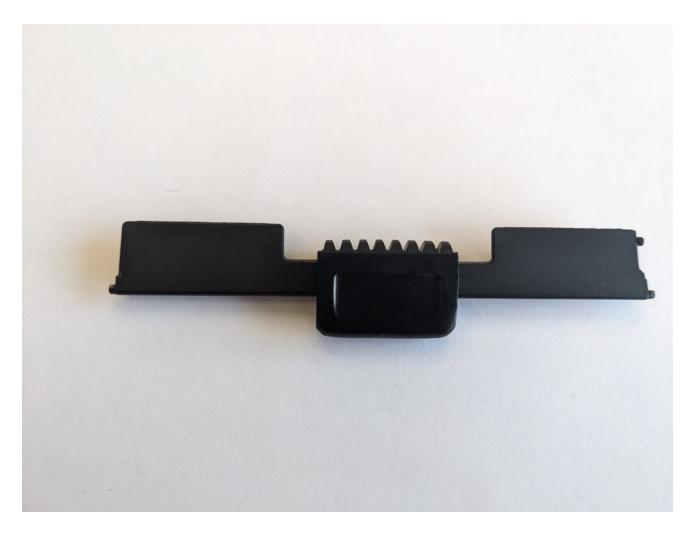

Once it clicked together make sure it moves from left to right. Before you install it back into the car, it must be positioned in the middle as pictured here.





Back in the car. As a reminder, please make sure that all the fins are perfectly straight, the horizontal ones in the front as well as the vertical ones behind them. Also make sure that the lever is positioned in the middle of the fin. Then start by pushing in the right side first, make sure you hit both holes with the pins on the right side of the fin. They should be in a straight line behind each other. Then you can push in the left side of the fin





That's it, please don't hesitate to contact us with any inquiries.



# Thx for watching our HowTo! Please visit our Parts Store at TOP CLASSIC PARTS LLC and our Dealership at TOP CLASSIC CARS LLC

Top Classic Parts LLC, 1952 Commercial Dr Fort Myers, FL, 33901 Cell: +1 (239) 339-7018 Email: order@top-classic-parts.com